

Guitar Hero 3 Skin Application



Step 1: Remove the faceplate from the guitar. To remove the faceplate you must first take off the neck, then unlock the faceplate using the switch on the back of the guitar. The faceplate will now easily pull off.

Step 2: Remove the skin for the faceplate from the backing layer and place it face down, adhesive side up.

Step 3: Spray either water or a soapy-water mixture on both the adhesive side of the skin and the front of the faceplate.

Step 4: Turn the faceplate face down and carefully position over the adhesive side of the skin (while the skin is still laying face down).

Step 5: Once you've placed the faceplate on the adhesive side of the skin, carefully turn it over and if necessary slide it around to get it accurately positioned. (Note: A portion of the faceplate around the neck area may not be fully covered, depending on the version of the skin you received. This is okay as the neck of the guitar will cover that area once reinstalled).

Step 6: With the skin properly aligned, use a squeegee or your fingers to press the skin down and squeeze the water out, working from the center of the skin towards the edges. Use a paper towel or absorbent cloth to soak up any excess water and completely dry the skin and faceplate.

Step 7: Place the skin back on the guitar and lock it down (using the switch on the back of the guitar).

Step 8: Remove the headstock skin from the backing layer and spray the adhesive side with the same water or soapy water mixture.

Step 9: Carefully position the headstock skin on the headstock of the guitar, sliding it until properly aligned, then press it down, working the water out to the edges.

Step 10: Use a paper towel or absorbent cloth to dry the headstock, then re-install the neck on to the guitar body.

Step 11: (Wii version only) Remove the remote skin from the adhesive backing and carefully position on your Wii remote to complete the skinned design. You can use water to more easily position the skin but we recommend dry-installing this piece to prevent any possible water-damage to your Wii remote.

You're done! Enjoy your new skin from DansDecals.com

A note about the CLASSIC WOOD 1 design: Some of our customers have reported a "discoloration" on the top-left side of the skin. This area of the skin is intentionally lightened to give the appearance of a highlight. This is not a defect in the skin and is how the skin is pictured on our website and eBay photos. If you think your skin is discolored or defective please view the product photos to see if its appearance differs from the product photos.